

Jost Bracket Pin Puller

10705

**TIGER
TOOL**

Have What It Takes

Safety Warning

Read all instructions and safety warnings prior to operation. Failure to do so could result in equipment damage, personal injury or even death.

CAUTION: USE REPLACEMENT PARTS AND ACCESSORIES PROVIDED BY TIGER TOOL ONLY. ALL REPLACEMENT PARTS AND ACCESSORIES ARE AVAILABLE. KEEP HYDRAULIC COUPLER PROTECTED WHEN NOT IN USE. DUST CAPS SHOULD BE USED ON COUPLERS WHEN NOT IN USE TO AVOID CONTAMINANTS FROM ENTERING THE HYDRAULIC CYLINDER AND POWER SOURCE. THIS PRACTICE WILL HELP TO EXTEND THE LIFE OF THIS PRODUCT AND ENSURE CONTINUED CONSISTENT OPERATION.

- **Stay Alert!** Watch what you are doing and use common sense when operating this tool.
- Inspect product for damage prior to using; do not use if product is in unsafe condition.
- Do not operate tool while under the influence of drugs, alcohol, or medication.
- Always use safety equipment to prevent injuries. Approved face and eye protection must always be worn by the operator, as well as others in the work area.
- Do not overreach. Keep proper footing and balance at all times.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.
- Keep hands clear of all pressurized hydraulic components.
- Always ensure hoses are free from sharp bends and kinks.
- Keep your work area clean and well lit.
- Cylinders are designed for 10,000 psi (700 bar) maximum working pressure. Do not connect to a pump with a higher rated pressure. Use a pressure gauge in the system at all times. Ensure all components in the system are rated for 10,000 psi (700 bar).



View demonstration videos and a complete product list at tigertool.com

Technical Support
1.800.661.4661

Jost Bracket Pin Puller

10705




**TIGER
TOOL**

Have What It Takes

Operating Instructions

- 1 Begin by removing the retainer bolts. Use a tap to clean the threaded area inside the bracket pin.
- 2 Bolt the hammer adapter into the center threaded hole of the bracket pin and strike it to shock it loose from the 5th wheel. Clean any rust, paint, or scale from the head of the bracket pin to create a clean metal surface for welding.
- 3 There are two weld-on adapter sizes included in the kit ($\frac{1}{2}$ ", $\frac{5}{8}$ "). Each adapter has a centering nub on the mating side to ensure proper alignment during the welding process. Weld the corresponding adapter to the bracket pin and then thread the coupler adapter onto the weld-on adapter. Next, thread the draw bar into the coupler adapter.
- 4 Slide the aluminum spacer tube and cylinder assembly over the threaded draw bar and install the washer and hex nut. Apply hydraulic pressure ensuring hands and body are not in line with the cylinder and threaded draw bar.
- 5 Once the cylinder has reached the end of its stroke (2") release hydraulic pressure allowing the piston to retract. Then spin up the hex nut and apply hydraulic pressure once again. Repeat as necessary until pin is removed.

Here at Tiger Tool, your satisfaction is our number one priority. Should you have any questions about this or any of our products, please call us at 1.800.661.4661.

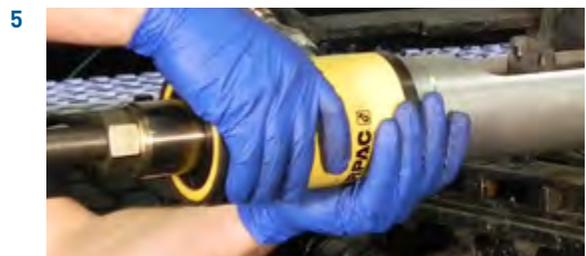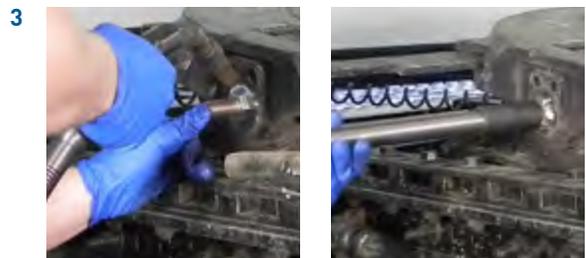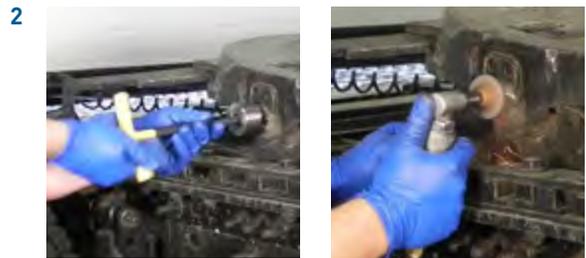

View demonstration videos and a complete product list at tigertool.com

Technical Support
1.800.661.4661

Jost Bracket Pin Puller

10705

**TIGER
TOOL**

Have What It Takes

Parts Breakdown



Item No.	Part Number	Description	Qty.
1	10705-1	Spacer Tube	1
2	10705-2	Cylinder Adaptor	1
3	17202(RCH202)	20 Ton Hollow Cylinder	1
4	10705-3	Bolt Adaptor	1
5	10705-8	5/8" - 11 x 7/8" SHCS	1
6	10705-7	1/2" - 13 x 7/8" SHCS	1
7	15001-41	Hex Nut	1
8	15001-42	Washer	1
9	15001-40	Threaded Rod - Long	1
10	10705-5	3/4" Bolt with 5/8" Center	4
11	10705-4	3/4" Bolt with 1/2" Center	4
12	10705-6	Hammer Adaptor	1



View demonstration videos and a complete product list at tigertool.com

Technical Support
1.800.661.4661